

新モデル FS9V4 が最新デジタル技術で 測定データの確認・共有がさらにスマートに



■ QR スキャンで即座に PDF 化。画面の QR コードをスマホやタブレット PC のカメラで読み取るだけで、その場で測定結果レポート (PDF) を確認できます。

■ CSV 出力&簡単シェア 生データの CSV ダウンロードも可能。PDF レポートと合わせて、メール、SMS、LINE 等で瞬時に共有できます。

■ メーカー無償提供のクラウドサイトにデータをアップロードすることで、現場を離れた担当者間でも、場所を選ばずいつでもデータを確認・共有できます。(要事前登録)

■ サーマルプリンター出力オプションも完備。デジタルによる先進的な管理と、アナログ (紙) による確実性も兼ね備え、現場の即戦力として機能します。

サンプルQRコード




従来のパーティクルカウンターにおける課題であった『測定後データのエクスポートおよび保存処理に要する時間』について、新技術・新機能の導入により大幅な時間短縮を達成。


従来の作業ストレスを解消し、スムーズなデータ管理を実現しました。

お試し
ください

[QR] を押すと自動的に
QR コードが生成！

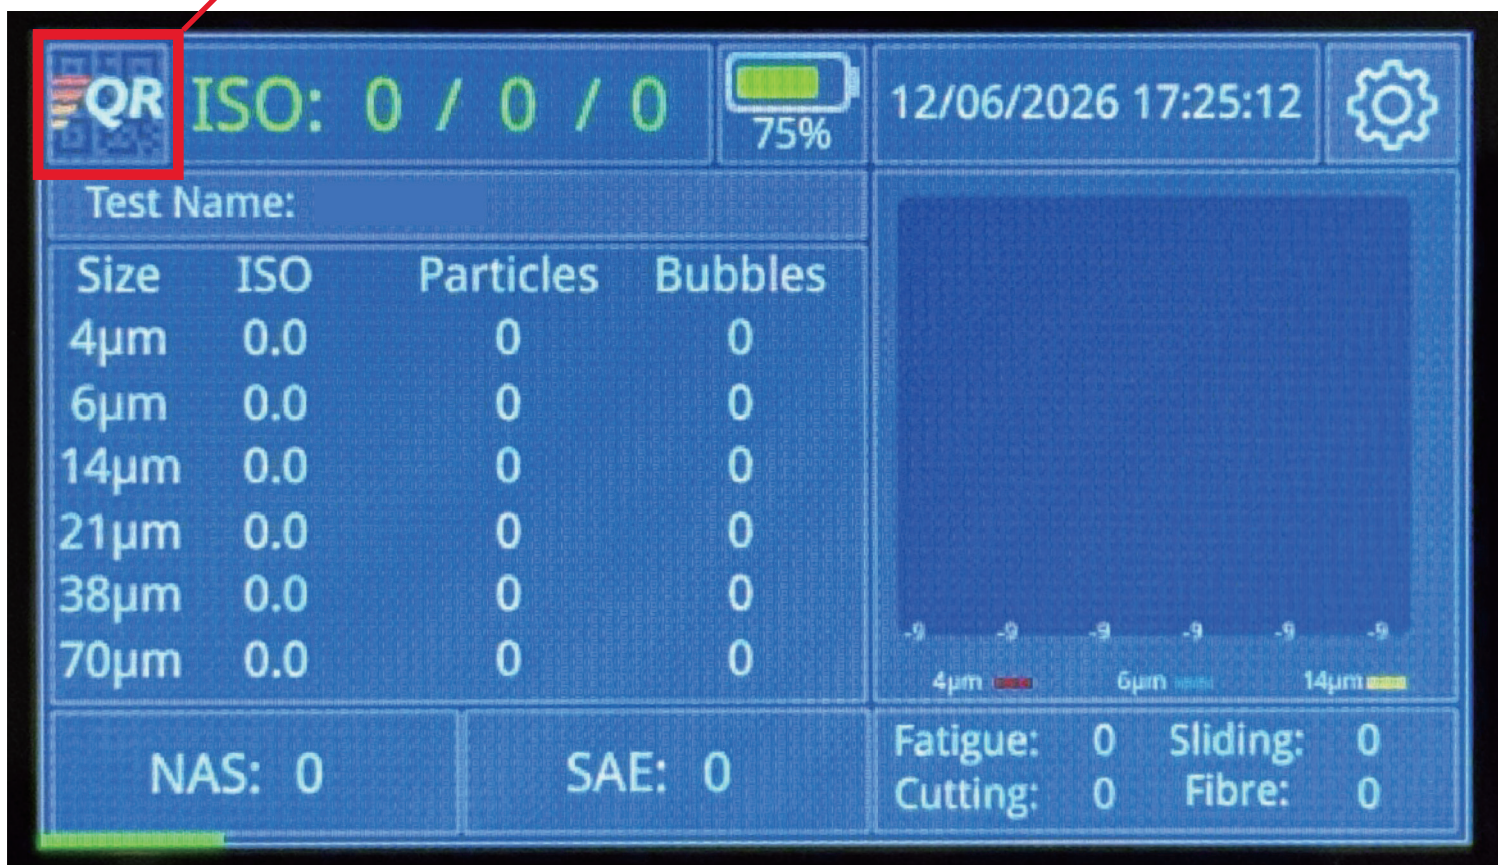

スマホに表示された測定結果を、PDF形式とCSV生データも、LINE/SMS/Eメールで転送共有できます。表示形式は、スマホモデルにより異なります。


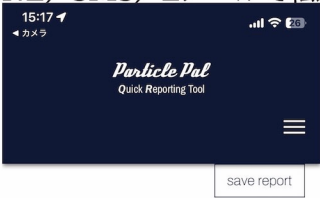


TEST

Unit Serial Number: 252400011000011D

Cleanliness Codes

Time	4μm ISO code	6μm ISO code	14μm ISO code	21μm ISO code	38μm ISO code	70μm ISO code	NAS SAE code
15:16:29	18.0	16.1	13.1	11.6	6.0	6.0	7
15:14:29	18.1	16.4	13.1	11.4	8.6	6.0	7
15:12:29	18.1	16.5	13.1	11.0	8.6	6.0	7
15:10:29	17.9	16.0	13.9	11.2	6.0	6.0	6
15:08:29	18.0	15.8	12.3	10.6	6.0	6.0	6

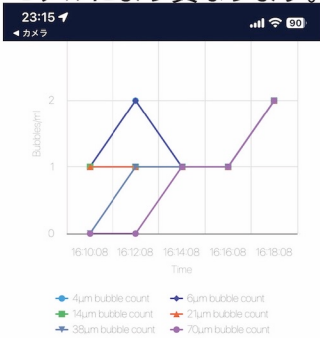

Root Cause Analysis

Time	Fatigue	Sliding	Cutting	Fibre
16:18:08	10	2	1	1
16:16:08	9	3	2	1
16:14:08	9	2	1	2
16:12:08	8	3	1	1
16:10:08	7	2	0	0



CSVデータ表示

23:16

Time	4μm ISO code	6μm ISO code	14μm ISO code	21μm ISO code	38μm ISO code	70μm ISO code	NAS SAE code
15:16:29	18.0	16.1	13.1	11.6	6.0	6.0	7
15:14:29	18.1	16.4	13.1	11.4	8.6	6.0	7
15:12:29	18.1	16.5	13.1	11.0	8.6	6.0	7
15:10:29	17.9	16.0	13.9	11.2	6.0	6.0	6
15:08:29	18.0	15.8	12.3	10.6	6.0	6.0	6

メールアドレスとパスワード（大文字・小文字・英数）を登録することで、PCからも測定結果を簡単に管理可能






TEST01

Unit Serial Number: 26240002010002C4

Cleanliness Codes

Time	4μm ISO code	6μm ISO code	14μm ISO code	21μm ISO code	38μm ISO code	70μm ISO code	NAS SAE code
07:11:56	19.7	19.1	18.1	13.0	6.0	6.0	10 12
07:09:54	20.1	19.8	18.2	14.0	8.6	6.0	10 12
07:07:54	20.5	20.1	18.7	14.2	6.0	6.0	10 12
07:06:54	19.2	18.9	17.5	14.4	6.0	6.0	9 11
07:03:56	11.6	11.1	10.8	6.0	6.0	6.0	2 5

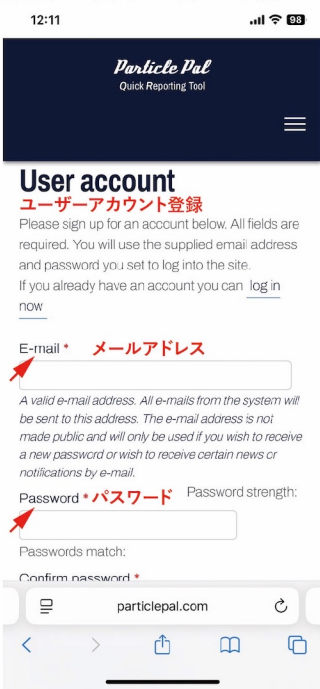

フィルターテクニック社の無償ポータルサイトにアカウントを作成し、測定データを保存可能。部署の共通アドレスを登録することで、簡単に測定データを皆様で共有管理することができます。

12:12

Confirm password *パスワード再入力

Provide a password for the new account in both fields.

Report settings

You can change these settings at any time in your account settings.

Enabled cleanliness codes *

☒ ISO

☒ NAS 必要に応じて選択

☒ SAE

Please select the cleanliness codes you would like to display on reports.

Report temperature unit * 温度単位

☒ Centigrade (°C)

☐ Fahrenheit (°F)

Please select the temperature units you would like to use on reports.

Account settings

Company name *

Contact name *

Contact telephone * 携帯電話番号

+81に最初の0は省略

Mobile/cellphone number preferred 例: +81-90

Company address * 会社住所

Date format * 日付形式

☐ UK (dd/mm/yyyy)

☒ US (mm/dd/yyyy)

I'm not a robot

Create new account アカウント作成ボタン

12:13

Account settings

Company name * 会社名

Contact name * お名前

Contact telephone * 携帯電話番号

+81に最初の0は省略

Mobile/cellphone number preferred 例: +81-90

Company address * 会社住所

Date format * 日付形式

☐ UK (dd/mm/yyyy)

☒ US (mm/dd/yyyy)

I'm not a robot

Create new account アカウント作成ボタン

12:24

Particle Pal

Quick Reporting Tool

view report edit report delete report

ログイン後、過去データを確認

TEST01

Unit Serial Number: 26240002010002C4

Cleanliness Codes

Time	4µm ISO code	6µm ISO code	14µm ISO code	21µm ISO code	38µm ISO code	70µm ISO code	NAS SAE code
07:11:55	19.7	19.1	18.1	13.0	6.0	6.0	10 12
07:09:54	20.1	19.8	18.2	14.0	8.6	6.0	10 12
07:07:54	20.5	20.1	18.7	14.2	6.0	6.0	10 12
07:05:54	19.2	18.8	17.5	14.4	6.0	6.0	9 11
07:03:55	11.6	11.1	10.8	6.0	6.0	6.0	2 5

particlepal.com

PCからもアクセスログインできますので、大きなスクリーンで簡単操作が可能です。 <https://particlepal.com>

12:24

Particle Pal

Quick Reporting Tool

view report edit report delete report

テスト名を編集できます

Report name *

TEST01

Report settings

Categories

Categories are optional. They are used to group report parameters such as customer name and asset name to type the name of the customer, asset etc which the is applicable to. If you have used the name before you, select the name from the suggestion which will appear. Separate each name with a comma and do not use it in category names. Once set, categories will appear as links on the 'my reports' page. Clicking a category name will show you all reports that category.

particlepal.com

23:12

Particle Pal

Quick Reporting Tool

my reports

my account

logout

view report edit report delete report

TEST

Unit Serial Number: 252400011000011D

Cleanliness Codes

Time	4µm ISO code	6µm ISO code	14µm ISO code	21µm ISO code	38µm ISO code	70µm ISO code	NAS SAE code
15:18:29	18.0	16.1	13.1	11.6	6.0	6.0	7
15:14:29	18.1	16.4	13.1	11.4	8.6	6.0	7

particlepal.com

23:12

Particle Pal

Quick Reporting Tool

view report edit report delete report

Your reports

Currently showing all reports. Restrict view by selecting a category below or [see all categories](#).

View Report	Categories	Date Created	Date Updated	Actions
TEST	No categories set	03/16/25, 06:20am	03/16/25, 06:20am	edit delete
LOW	No categories set	03/9/25, 08:34am	03/9/25, 08:34am	edit delete
AFTER	No categories set	03/8/25, 02:08am	03/8/25, 02:08am	edit delete
PURIFIED	No categories set	03/8/25, 01:53am	03/8/25, 01:53am	edit delete
01	No categories set	03/8/25, 01:30am	03/8/25, 01:30am	edit delete
Report	No categories set	03/7/25, 07:47am	03/7/25, 07:47am	edit delete
DN_SG150	No categories set	11/25/24, 08:29am	12/20/24, 07:25am	edit delete
DN_SG150	No categories set	11/25/24,	11/25/24,	edit delete

particlepal.com